

VOLVO 9700



DRIVER'S GUIDE



WHEELCHAIR LIFT REMOTE



66 POWER ENABLE SWITCH

Provides power to the pendant and thereby enables the lift.

67 DEPLOY

Platform moves outward from lift compartment.

68 STOW

Platform moves downward toward stow level and then retracts into lift compartment. If platform is below stow level, it must first be raised above stow level.

69 DOWN

Platform lowers toward ground level. Bridgeplate automatically rises when platform drops below floor level.

70 UP

Platform rises toward vehicle floor level. Bridgeplate automatically lowers when platform arrives at floor level.

OPERATING THE WHEELCHAIR LIFT

DEPLOY PLATFORM

Press and hold **DEPLOY** button until platform is completely extended from lift compartment.

NOTE: Platform cannot be moved up or down unless platform is fully extended.

Unlatch each handrail by pushing downward and then swinging outward by hand.

Pull out on top edge of platform to release magnetic latch and lower platform sections to horizontal position; weight of platform is spring assisted.

Unfold front platform section by grasping handle provided.

Raise front rollstop to upright position and lock in place by allowing it to drop into the slots at rollstop pivot points.



Wheelchair Lift
Instruction Video
(<http://www.youtube.com/watch?v=EeSdznopn24>)

LOWER PLATFORM

Press and hold **DOWN** button until platform contacts ground. Verify that bridgeplate is in upright position.

Lift front rollstop out of slots and swing forward until it rests on ground.

Carefully place wheelchair in center of platform, preferably facing outward (away from vehicle), and lock wheelchair brakes. Pull safety belt from retractor on handrail and fasten to other handrail.

Raise front rollstop to upright position and lock in place by allowing it to drop into the slots at rollstop pivot points.

RAISE PLATFORM

Press and hold **UP** button until platform rises and stops automatically at vehicle floor level. Verify that bridgeplate lowers to horizontal position and rests flat on vehicle floor.

Release wheelchair brakes, and carefully board passenger into vehicle.





AUDIO-VIDEO DISPLAY AND CONTROL UNIT

GENERAL FUNCTIONS

- 71 ON** button
- 72** CD compartment of the CCD
- 73** CD eject button (drive of the CCD)
- 74 AM** button
- 75 TA** button
Short press: Activate/deactivate traffic announcement priority; cancel a playing traffic announcement
Long press: Start the Travelstore function
- 76** End a Call button
- 77** Station buttons **1 - 6**
Short press: Select a stored station
Long press: Store a station
- 78 FM** button
- 79 SCRL** button
Display the contents of the display as scrolling text
- 80** **Short press:** Answer or place a call
Long press: Open the phone book
- 81** DVD/CD compartment of the CCS
- 82** DVD/CD eject button (drive of the CCS)
- 83** Remote buttons
- 84 ENTER** button
Confirmation function in navigation, video, DVD and TV mode
- 85 MENU** button
Open the main menu to configure the device's main functions
- 86 ESC** button
Close menus

- 87 NAVI** button
Activate the control of a connected navigation system using:
- remote buttons **83** - **ENTER** button **84**
in the same way as the remote control of the navigation system
- 88 CAM** button
Select a camera image on the driver's monitor
- 89 MON** button
Activate, deactivate and/or synchronise the monitors in the cabin
- 90 MAP** button
Display the navigation map display in the cabin (only when a Coach Navigation unit is connected in conjunction with a suitable driver's monitor)

DRIVER'S CONTROLS

- 91** Left control knob for the cockpit
Turn: Adjust the volume and the menu selection
Press: Open and confirm menu items
- 92 RADIO** Select the radio audio source
- 93 VIDEO** Select the video source (drive of the CCS and external video sources)
- 94 CD** Select the CD audio source (drive of the CCD)
- 95 AUX** Select the USB and AUX audio sources

PASSENGER'S CONTROLS

- 96** Right control knob for the cabin
Turn: Adjust the volume and the menu selection
Press: Open and confirm menu items
- 97 RADIO** Select the radio audio source
- 98 VIDEO** Select the video source (drive of the CCS and external video sources)
- 99 CD** Select the CD audio source (drive of the CCD)
- 100 AUX** Select the USB and AUX audio sources



Never release the park brake without the footbrake engaged!

¡Nunca libere el freno de estacionamiento sin que el pedal de freno este presionado!

Ne jamais relâcher le frein de stationnement à moins que la pédale de frein ne soit enfoncée !

VOLVO 21511437

DASH BOARD CONTROLS

MIRROR

- 1 Mirror heater
- 2 Rear-view mirror adjustment

LIGHTINGS

- 3 Parking brake
- 4 Lighting panel
- 27 Night lighting
- 28 Passenger's reading lights
- 29 Passenger's area lighting
- 30 Under seats night lighting
- 32 Driver's area lighting
- 42 Position light

SUSPENSION

- 5 Tire Pressure Monitoring System
- 6 Kneeling
- 7 Tag axle¹
- 9 Bus level control
- 10 Hill start assist
- 11 Traction control system

GAUGES

- 12 Turbo boost pressure
- 13 Tachometer
- 14 Engine coolant temperature



- 16 DEF (Diesel Exhaust Fluid) Level
- 17 DID (driver information display)
- 18 Speedometer
- 19 Front brake system air pressure
- 20 Fuel level
- 21 Rear brake system air pressure
- 35 Emergency window indicator light

AUDIO/VIDEO

- 15 Driver's microphone enable
- 36 Audio-video display unit
- 37 Audio-video control unit

CLIMATE

- 23 Temperature control, driver's area²
- 24 Air flow selector
- 25 Fan speed
- 26 Temperature control, passenger's area*
- 44 Driver's fan
- 46 Auxiliary heater display (option)

DOORS

- 31 Exterior door switch activation
- 41 Entrance door opening

WHEELCHAIR LIFT

- 38 Wheelchair lift system enable indicator light (option)
- 39 Wheelchair lift door ajar indicator light (option)
- 40 Wheelchair lift system main switch (option)

OTHERS CONTROLS

- 8 Main battery switch³
- 22 Automatic Fire Suppression System
- 33 Front sun visor
- 34 Delay Automatic Fire Suppression System

- 43 Central locking
- 45 Lavatory activation
- 47 Clock button
- 48 Program selection button
- 49 Unit start-up button
- 50 Button to reduce the value of the selected parameter
- 51 Button to increase the value of the selected parameter
- ?? I-SHIFT (see I-Shift section on right for details)



WHEELCHAIR LIFT

- 38 Wheelchair lift system enable indicator light (option)
- 39 Wheelchair lift door ajar indicator light (option)
- 40 Wheelchair lift system main switch (option)

OTHERS CONTROLS

- 8 Main battery switch^a
- 22 Automatic Fire Suppression System
- 33 Front sun visor
- 34 Delay Automatic Fire Suppression System
- 43 Central locking
- 45 Lavatory activation
- 47 Clock button
- 48 Program selection button
- 49 Unit start-up button
- 50 Button to reduce the value of the selected parameter
- 51 Button to increase the value of the selected parameter
- 77 I-SHIFT (see I-Shift section on right for details)

1- For Towing. Disconnect the drive axle from the transmission.

IMPORTANT: DO NOT release parking brake unless foot brake is engaged.

2- To get full AC with the door open: (applies to fast idle option)

1. Engage parking brake.
2. Put gearshift in neutral.
3. Door brake indicator on dashboard is then disengaged.

3- When the vehicle is not running, turn the main battery switch OFF, with the bottom of this button pushed in! If left on, the batteries will be discharged.



Auxiliary heater panel (option)
(sits behind the dash drawer)

STEERING WHEEL WANDS

- 52 Idling speed adjust/
cruise set speed
- 53 Cruise control activation
- 54 Headlight beam toggle,
turn signal

- 55 Volvo engine brake/retarder
- 56 Braking force selector
- 57 Windshield wipers
and washers control
- 58 ESCAPE button, DID menu

- 59 ENTER button, DID menu
- 60 UP/DOWN button, DID menu



I-SHIFT SELECTOR PAD

- 61 Selected gear display
- 62 Manual gear selector UP/DOWN
- 63 Reverse
- 64 Economy/Performance mode
- 65 Neutral
- 66 Automatic Drive Mode
- 67 Manual Drive Mode
(Use + and - Shift buttons)

PREVOST PARTS & SERVICE CENTERS



BRITISH COLUMBIA • CALIFORNIA • ALBERTA • TEXAS • ILLINOIS • TENNESSEE • FLORIDA • NEW JERSEY • QUEBEC

**Prevost Parts
& Service Center – CALIFORNIA**
3384 De Forest Circle
Mira Loma, CA 91752
Toll Free: 1-800-421-9958
Fax: 951-360-2565 Parts

**Prevost Parts
& Service Center – FLORIDA**
6931 Business Park Blvd. N.
Jacksonville, FL 32256
Toll Free: 1-800-874-7740
Fax: 904-886-0093 Parts

**Prevost Parts
& Service Center – TEXAS**
15200 Frye Road
Fort Worth, TX 76155-2702
Toll Free: 1-866-773-8678
Fax: 817-685-0460

**Prevost Parts
& Service Center – NEW JERSEY**
201 South Ave.
South Plainfield, NJ 07080
Toll Free: 1-800-223-0830
Fax: 908-222-7304

**Prevost Parts
& Service Center – TENNESSEE**
800 South Cartwright Street
Goodlettsville, TN 37072
Toll Free: 1-877-299-8881
Fax: 615-299-8816 Administration

**Prevost Parts
& Service Center – ALBERTA**
292 MacDonald Crescent
Fort McMurray, AB T9H 4B6 CANADA
Tel.: 780-792-9526
Fax: 780-743-0983

**Prevost Parts & Service Center
BRITISH COLUMBIA**
6537 River Road
Delta, BC V4K 5B9 CANADA
Tel.: 604-940-3306
Fax: 604-940-3384

**Prevost Parts
& Service Center – QUEBEC**
850 chemin Olivier
Saint-Nicolas, QC G7A 2N1 CANADA
Toll Free: 1-866-870-2046
Fax: 418-831-7432

TO ORDER PARTS

**Prevost Parts Customer Service
US**
2200 Point Blvd, Suite 100
Elgin, IL 60123
Toll Free: 1-800-621-5519
(Coach Parts)
1-877-999-8808
(Transit Parts)
Toll Free Fax: 1-877-999-8809

**Prevost Parts Customer Service
CANADA**
2955-A Watt Street
Quebec City, QC G1X 3W1
Toll Free: 1-800-463-8876
Toll Free Fax: 1-800-939-0133 Parts
Fax: 418-658-1723

PREVOST ACTION SERVICE SYSTEM

PASS is available 24/7 by calling
1-800-463-7738, 365 days a year.

PREVOST
www.prevostcar.com

© 2013 Prevost. All rights reserved.
Printed in Canada 13.01-1K



Sources Mixtes
www.fsc.org Cert no. XXX-000-0000
© 1996 Forest Stewardship Council

