



# VOLVO 9700 DRIVER'S GUIDE



# WHEELCHAIR LIFT REMOTE



## 66 POWER ENABLE SWITCH

Provides power to the pendant and thereby enables the lift.

## 67 DEPLOY

Platform moves outward from lift compartment.

## 68 STOW

Platform moves downward toward stow level and then retracts into lift compartment. If platform is below stow level, it must first be raised above stow level.

## 69 DOWN

Platform lowers toward ground level. Bridgeplate automatically rises when platform drops below floor level.

## 70 UP

Platform rises toward vehicle floor level. Bridgeplate automatically lowers when platform arrives at floor level.

## OPERATING THE WHEELCHAIR LIFT

### DEPLOY PLATFORM

Press and hold **DEPLOY** button until platform is completely extended from lift compartment.

*NOTE: Platform cannot be moved up or down unless platform is fully extended.*

Unlatch each handrail by pushing downward and then swinging outward by hand.

Pull out on top edge of platform to release magnetic latch and lower platform sections to horizontal position; weight of platform is spring assisted.

Unfold front platform section by grasping handle provided.

Raise front rollstop to upright position and lock in place by allowing it to drop into the slots at rollstop pivot points.

### LOWER PLATFORM

Press and hold **DOWN** button until platform contacts ground. Verify that bridgeplate is in upright position.

Lift front rollstop out of slots and swing forward until it rests on ground.

Carefully place wheelchair in center of platform, preferably facing outward (away from vehicle), and lock wheelchair brakes. Pull safety belt from retractor on handrail and fasten to other handrail.

Raise front rollstop to upright position and lock in place by allowing it to drop into the slots at rollstop pivot points.

### RAISE PLATFORM

Press and hold **UP** button until platform rises and stops automatically at vehicle floor level. Verify that bridgeplate lowers to horizontal position and rests flat on vehicle floor.

Release wheelchair brakes, and carefully board passenger into vehicle.





## AUDIO-VIDEO DISPLAY AND CONTROL UNIT

### GENERAL FUNCTIONS

- 71** **ON** button
- 72** CD compartment of the CCD
- 73** CD eject button (drive of the CCD)
- 74** **AM** button
- 75** **TA** button  
Short press: Activate/deactivate traffic announcement priority; cancel a playing traffic announcement  
Long press: Start the Travelstore function
- 76** **>>** button, Start seek tuning
- 77** Station buttons **1 - 6**  
Short press: Select a stored station  
Long press: Store a station
- 78** **FM** button
- 79** **SCRL** button  
Display the contents of the display as scrolling text
- 80** **<<** button, Start seek tuning
- 81** DVD/CD compartment of the CCS
- 82** DVD/CD eject button **▲** (drive of the CCS)
- 83** Remote buttons
- 84** **ENTER** button  
Confirmation function in navigation, video, DVD and TV mode
- 85** **MENU** button  
Open the main menu to configure the device's main functions
- 86** **ESC** button  
Close menus

- 87** **NAVI** button  
Activate the control of a connected navigation system using:  
- remote buttons **83** - **ENTER** button **84**  
in the same way as the remote control of the navigation system
- 88** **CAM** button  
Select a camera image on the driver's monitor
- 89** **MON** button  
Activate, deactivate and/or synchronise the monitors in the cabin
- 90** **MAP** button  
Display the navigation map display in the cabin (only when a Coach Navigation unit is connected in conjunction with a suitable driver's monitor)

### DRIVER'S CONTROLS

- 91** Left control knob for the cockpit  
Turn: Adjust the volume and the menu selection  
Press: Open and confirm menu items
- 92** **RADIO** Select the radio audio source
- 93** **VIDEO** Select the video source (drive of the CCS and external video sources)
- 94** **CD** Select the CD audio source (drive of the CCD)
- 95** **AUX** Select the USB and AUX audio sources

### PASSENGER'S CONTROLS

- 96** Right control knob for the cabin  
Turn: Adjust the volume and the menu selection  
Press: Open and confirm menu items
- 97** **RADIO** Select the radio audio source
- 98** **VIDEO** Select the video source (drive of the CCS and external video sources)
- 99** **CD** Select the CD audio source (drive of the CCD)
- 100** **AUX** Select the USB and AUX audio sources



Never release the park brake without the footbrake engaged!  
 ¡Nunca libere el freno de estacionamiento sin que el pedal de freno este presionado!  
 Ne jamais relâcher le frein de stationnement à moins que la pédale de frein ne soit enfoncée !  
**VOLVO** 21511437

## DASH BOARD CONTROLS

### MIRROR

- 1 Mirror heater
- 2 Rear-view mirror adjustment

### LIGHTINGS

- 3 Parking brake
- 4 Lighting panel
- 27 Night lighting
- 28 Passenger's reading lights
- 29 Passenger's area lighting
- 30 Under seats night lighting
- 32 Driver's area lighting
- 42 Position light

### SUSPENSION

- 5 Tire Pressure Monitoring System
- 6 Kneeling
- 7 Tag axle<sup>1</sup>
- 9 Bus level control
- 10 Hill start assist
- 11 Traction control system

### GAUGES

- 12 Turbo boost pressure
- 13 Tachometer
- 14 Engine coolant temperature
- 15 Engine oil pressure



- 13 DEF (Diesel Exhaust Fluid) Level
- 17 DID (driver information display)
- 18 Speedometer
- 19 Front brake system air pressure
- 20 Fuel level
- 21 Rear brake system air pressure
- 35 Emergency window indicator light

#### AUDIO/VIDEO

- 36 Audio-video display unit
- 37 Audio-video control unit

#### CLIMATE

- 23 Temperature control, driver's area<sup>2</sup>
- 24 Air flow selector
- 25 Fan speed
- 26 Temperature control, passenger's area\*
- 44 Driver's fan
- 46 Auxiliary heater display (option)

#### DOORS

- 31 Exterior door switch activation
- 41 Entrance door opening


#### WHEELCHAIR LIFT

- 38 Wheelchair lift system enable indicator light (option)
- 39 Wheelchair lift door ajar indicator light (option)
- 40 Wheelchair lift system enable switch (option)

#### OTHERS CONTROLS

- 8 Main battery switch<sup>3</sup>
- 22 Automatic Fire Suppression System
- 33 Front sun visor
- 34 Delay Automatic Fire Suppression System

- 43 Central locking
- 45 Lavatory activation
- 47 Clock button
- 48 Program selection button
- 49 Unit start-up button
- 50 Button to reduce the value of the selected parameter
- 51 Button to increase the value of the selected parameter

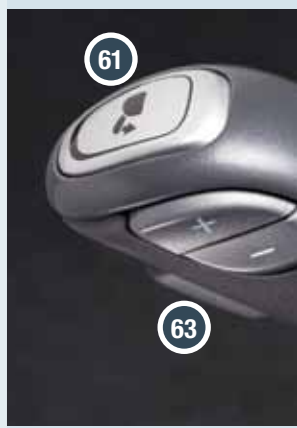


**1- For Towing,** Disconnect the drive axle from the transmission.

**IMPORTANT:** DO NOT release parking brake unless foot brake is engaged.

**2- To get full AC with the door open:**  
(applies to fast idle option)

1. Engage parking brake.
2. Put gearshift in neutral.
3. Door brake indicator on dashboard is then disengaged.

**3- When the vehicle is not running, turn the main battery switch OFF,** with the bottom of this button pushed in! If left on, the batteries will be discharged.

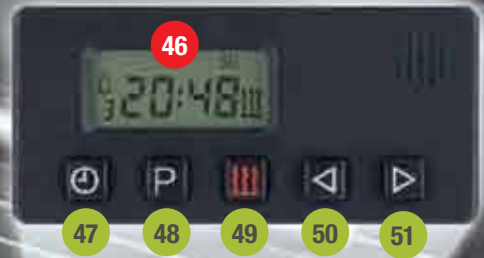

**Auxiliary heater panel (option)**  
(sits behind the dash drawer)

# STEERING WHEEL WANDS

- 52 Idling speed adjust/  
cruise set speed
- 53 Cruise control activation
- 54 Headlight beam toggle,  
turn signal
- 55 Volvo engine brake/retarder
- 56 Braking force selector
- 57 Windshield wipers  
and washers control
- 58 ESCAPE button, DID menu
- 59 ENTER button, DID menu
- 60 UP/DOWN button, DID menu



LEFT STEERING WAND

RIGHT STEERING WAND



# I-SHIFT

- 61 Gear selector tilt button
- 62 Manual gear selector UP/DOWN
- 63 Gear selector lock
- 64 Economy/Performance mode
- 65 Limp-home mode





## PREVOST PARTS & SERVICE CENTERS

**Prevost Parts  
& Service Center – CALIFORNIA**  
3384 De Forest Circle  
Mira Loma, CA 91752  
Toll Free: 1-800-421-9958  
Fax: 951-360-2565 Parts

**Prevost Parts  
& Service Center – FLORIDA**  
6931 Business Park Blvd. N.  
Jacksonville, FL 32256  
Toll Free: 1-800-874-7740  
Fax: 904-886-0093 Parts

**Prevost Parts  
& Service Center – TEXAS**  
15200 Frye Road  
Fort Worth, TX 76155-2702  
Toll Free: 1-866-773-8678  
Fax: 817-685-0460

**Prevost Parts  
& Service Center – NEW JERSEY**  
201 South Ave.  
South Plainfield, NJ 07080  
Toll Free: 1-800-223-0830  
Fax: 908-222-7304

**Prevost Parts  
& Service Center – TENNESSEE**  
800 South Cartwright Street  
Goodlettsville, TN 37072  
Toll Free: 1-877-299-8881  
Fax: 615-299-8816 Administration

**Prevost Parts  
& Service Center - ALBERTA**  
292 MacDonald Crescent  
Fort McMurray, AB T9H 4B6 CANADA  
Tel.: 780-792-9526  
Fax: 780-743-0983

**Prevost Parts & Service Center  
BRITISH COLUMBIA**  
6537 River Road  
Delta, BC V4K 5B9 CANADA  
Tel.: 604-940-3306  
Fax: 604-940-3384

**Prevost Parts  
& Service Center – QUEBEC**  
850 chemin Olivier  
Saint-Nicolas, QC G7A 2N1 CANADA  
Toll Free: 1-866-870-2046  
Fax: 418-831-7432

## TO ORDER PARTS

**Prevost Parts Customer Service  
US**  
2200 Point Blvd, Suite 100  
Elgin, IL 60123  
Toll Free: 1-800-621-5519  
(Coach Parts)  
1-877-999-8808  
(Transit Parts)  
Toll Free Fax: 1-877-999-8809

**Prevost Parts Customer Service  
CANADA**  
2955-A Watt Street  
Quebec City, QC G1X 3W1  
Toll Free: 1-800-463-8876  
Toll Free Fax: 1-800-939-0133 Parts  
Fax: 418-658-1723

## PREVOST ACTION SERVICE SYSTEM

PASS is available 24/7 by calling 1-800-463-7738, 365 days a year.

# PREVOST®

[www.prevostcar.com](http://www.prevostcar.com)

