



X-Series
**DRIVER'S
GUIDE**

PREVOST
THE ULTIMATE EXPERIENCE



Dashboard controls

Lighting

- 1 Headlights and exterior lighting
- 2 Fog lights
- 3 Hazard warning flashers
- 4 Driver area lighting
- 5 Interior lighting
- 6 Reading lights
- 7 Dashboard brightness control

Climate control

- 8 Air vents
- 9 HVAC control unit
- 10 Passenger overhead air vents fan

Driving

- 11 Fast idle
- 12 Engine brake/Transmission retarder
- 13 Engine stop override
- 14 Traction control system

Accessories

- 15 Tire Pressure Monitoring System Display (TPMS)
- 16 LH windshield sunshades
- 17 RH windshield sunshades
- 18 Wheelchair lift system activation
- 19 Stop/Service chime
- 20 Destination sign
- 21 Passenger Audio/Video selector
- 22 Driver dashboard radio
- 23 Emergency lights system

Electrical & Engine power

- 24 Ignition switch

Access control


- 25 Entrance door – close: green, open: red

26 Instrument Panel




Dashboard controls

- 27 Transmission control pad
- 28 Cruise control activation
- 29 Kneeling/Hi-Buoy
- 30 Horn selector
- 31 Driver window
- 32 Side mirrors heat
- 33 Baggage compartment central locking system
- 34 Side mirrors control
- 35 Tag axle control
- 36 Parking brake
- 37 Coolant heater timer

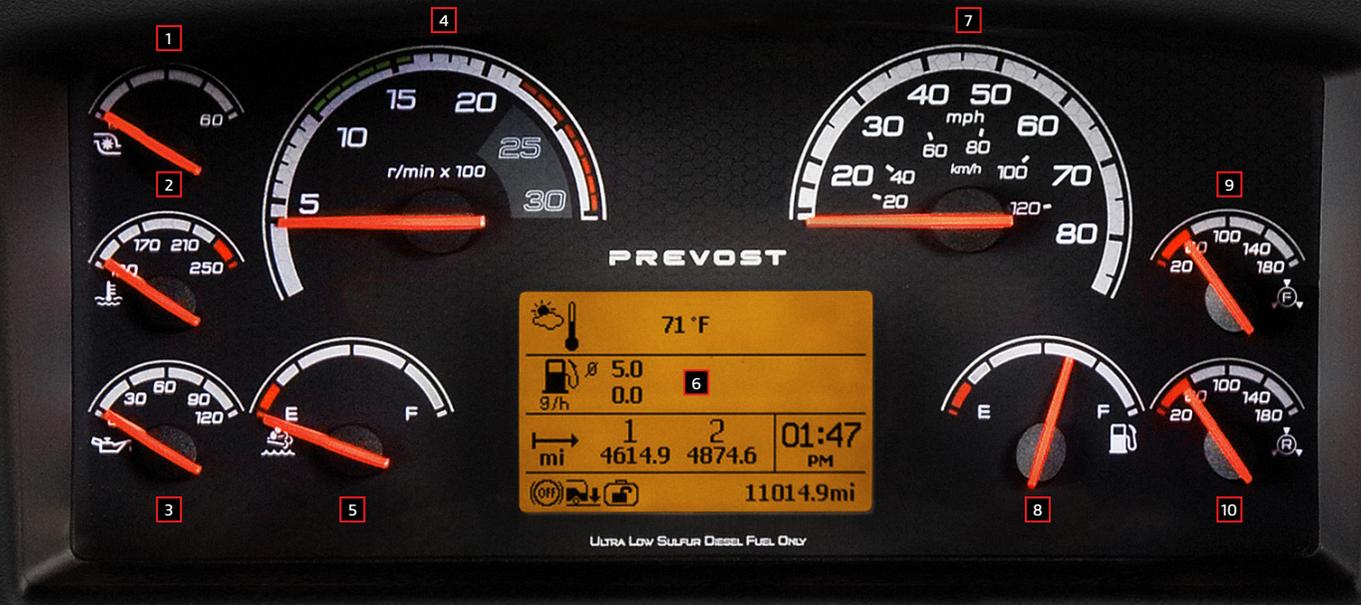

Instrument panel

- 1 Turbo Boost Pressure
- 2 Engine Coolant Temperature
- 3 Oil Pressure Indicator
- 4 Tachometer
- 5 DEF Level (Diesel Exhaust Fluid) Indicator
- 6 Driver Information Display (DID)
- 7 Speedometer
- 8 Fuel Level
- 9 Front Brake Air Pressure (Secondary)
- 10 Rear Brake Air Pressure (Primary)

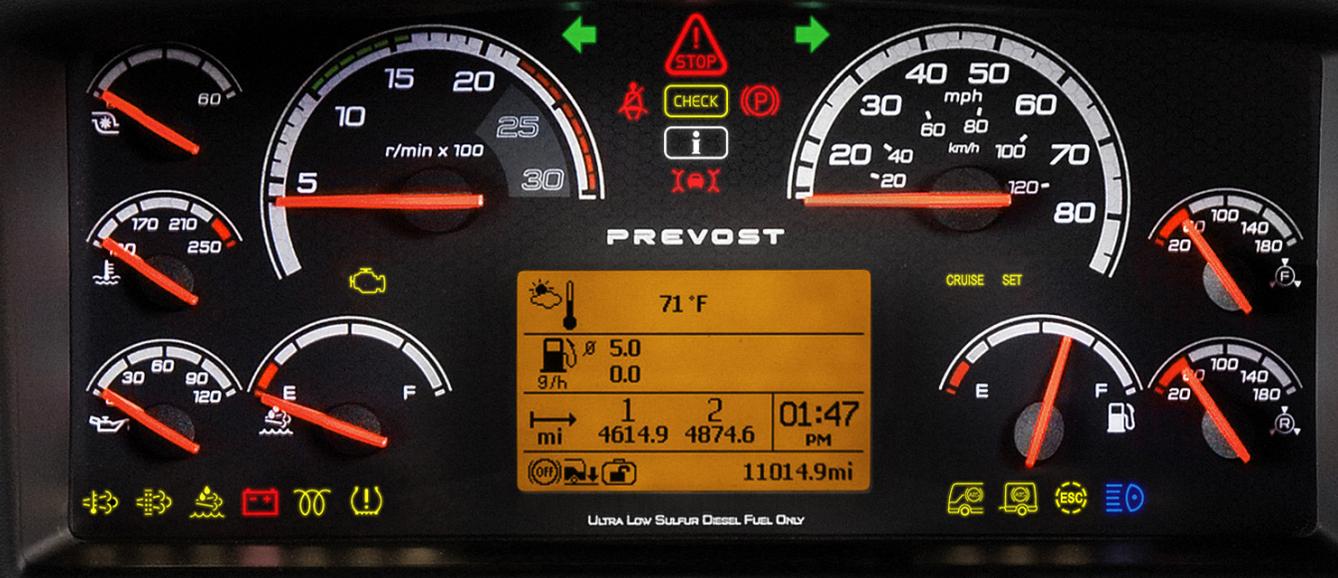

Telltale lights

Check

Indicates a problem has been detected and must be checked at the next stop. This notification may be accompanied with a message in the DID and a diagnostic troubleshooting code will be stored to aid in identifying the problem.

Aftertreatment system (MIL)

Indicates a failure of an emission control device. May illuminate at the same time as the CHECK amber warning light. The lamp will go out after 3 completed ignition on-ride-ignition off cycles. Vehicle can be driven to end of shift.

Cruise Control

Indicates that the cruise control is enabled.

Cruise Control Set Speed

Indicates that a cruising speed is set and stored in the memory.

High Exhaust System Temperature (HEST)

Illuminates to notify the driver of potentially hazardous exhaust gas temperature at the exhaust system diffuser.

DPF regeneration

Illuminates to notify the driver that a manual stationary regeneration will be required soon.

Low DEF

Illuminates when there is less than 2.6 gallons (10 liters) of DEF remaining.

Intake air preheater on

Illuminates when the intake air preheater element is in function. Wait until this telltale light has turned off before starting the engine.

Tire pressure monitoring system warning

Indicates a high tire temperature condition or incorrect tire inflation pressure.

Anti-lock Brake System (ABS)

Indicates ABS is not available or is malfunctioning. ABS is available over 4 mph (7 km/h); the indicator will remain illuminated until the coach reaches that speed.


Trailer Anti-lock Brake System (ABS)

Illuminates when trailer ABS is unavailable or malfunctioning.

Electronic Stability Control - ESC

Flashes quickly when ESC or TCS intervenes to reduce risk of loss of control.

Flashes slowly when TCS mud/snow mode is engaged.

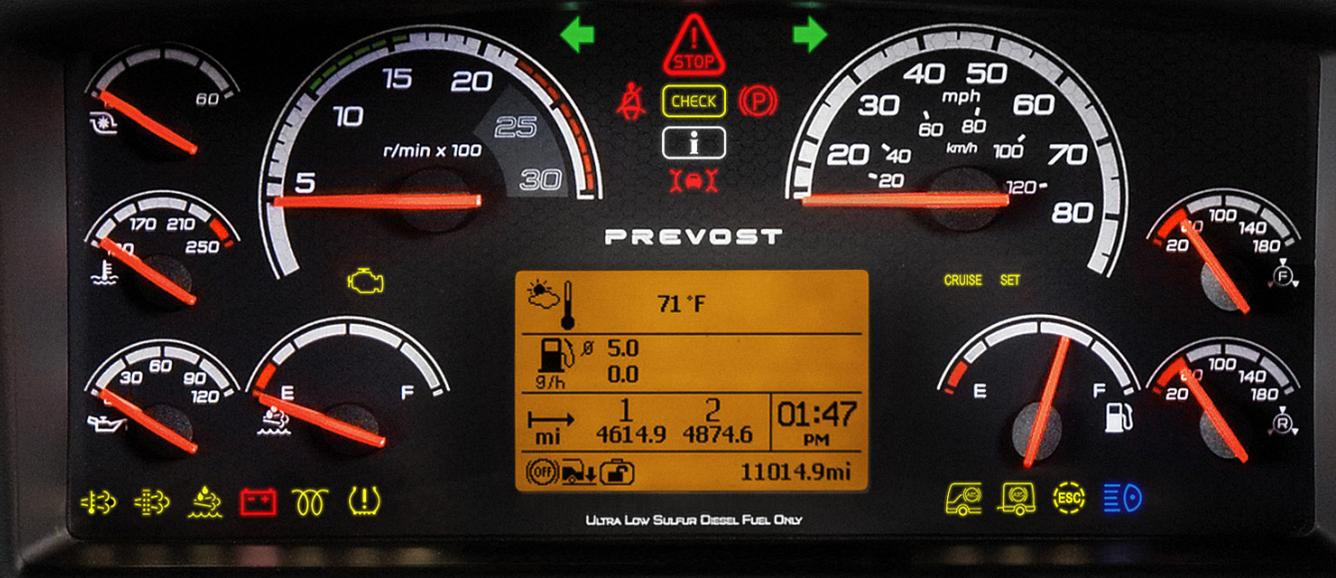

Telltale lights



Stop

Indicates that a serious problem has been detected. Immediately park the coach in a safe place and stop the engine. WARNING: Failure to take necessary action when the STOP telltale light is ON can ultimately result in automatic engine derate and shutdown.



Driver's seat belt reminder light and warning buzzer

When equipped with a seat belt buckle switch, warns the driver to fasten his/her seat belt.



Parking brake or emergency brake applied

Illuminates when the emergency or parking brake is applied. An audible alert will sound if ignition is turned to OFF and the parking brake is not engaged.



Adaptive Cruise Braking (ACB)

Flashing red: Collision alert. The forward vehicle is too close to follow safely.

Red: System malfunction. The ACB system and the alert functions are not available.

Green: The forward vehicle is detected (in range).



Alternators/Charging system

Indicates a malfunction of the charging system or a low battery voltage condition.



Turn signal indicators

Flash when left or right turn signals are activated using the headlights & flashers stalk on the steering column.



Information

This telltale light illuminates when there is a new information message or an abnormal status is detected by the electronic control unit. A pictogram, text or both are shown in the Driver Information Display in addition to the INFO telltale light. Make sure the indicated fault is checked at the next stop.



High beam

Illuminates when the high beams are selected. High and low beams are selected with the headlights & flashers stalk.




Steering wheel controls

- 1 Headlights, turn signals & wipers stalk
- 2 Cruise Control
- 3 Windshield Blind - Driver Side (press and hold to lower; press twice and hold to raise)
- 4 Escape/Enter (Driver Information Display)
Enter: Lift this button briefly.
Escape: Press briefly on this button.
- 5 Up/Down (Driver Information Display)
Use this button to scroll up or down through the menus.
- 6 Engine Brake/Retarder
- 7 Windshield Blind - Passenger Side (press and hold to lower; press twice and hold to raise)
- 8 Volume (Dashboard radio)
Use this button to increase or decrease the dashboard radio (driver's radio) volume.
- 9 Seek (Dashboard radio)
Use this button to seek up or down for a radio station.




Driver dashboard radio

- | | |
|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p>1 Phone
Open the Phone app.</p> <p>2 Back
Exit the current screen and open the previous screen.</p> <p>3 Home
Return to the main home screen.</p> <p>4 Menu/Settings
Open the menu related to the current screen.
When the System is on the Home screen,
the Menu button opens the "System Settings" menu.</p> | <p>5 Volume/Power
Rotate to increase/decrease Volume.
Press Knob to turn ON/OFF the Radio.</p> <p>6 Display and button brightness adjustment, reduce.</p> <p>7 Display and button brightness adjustment, increase.</p> <p>8 Eject
Ejects disc from CD slot.</p> |
|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

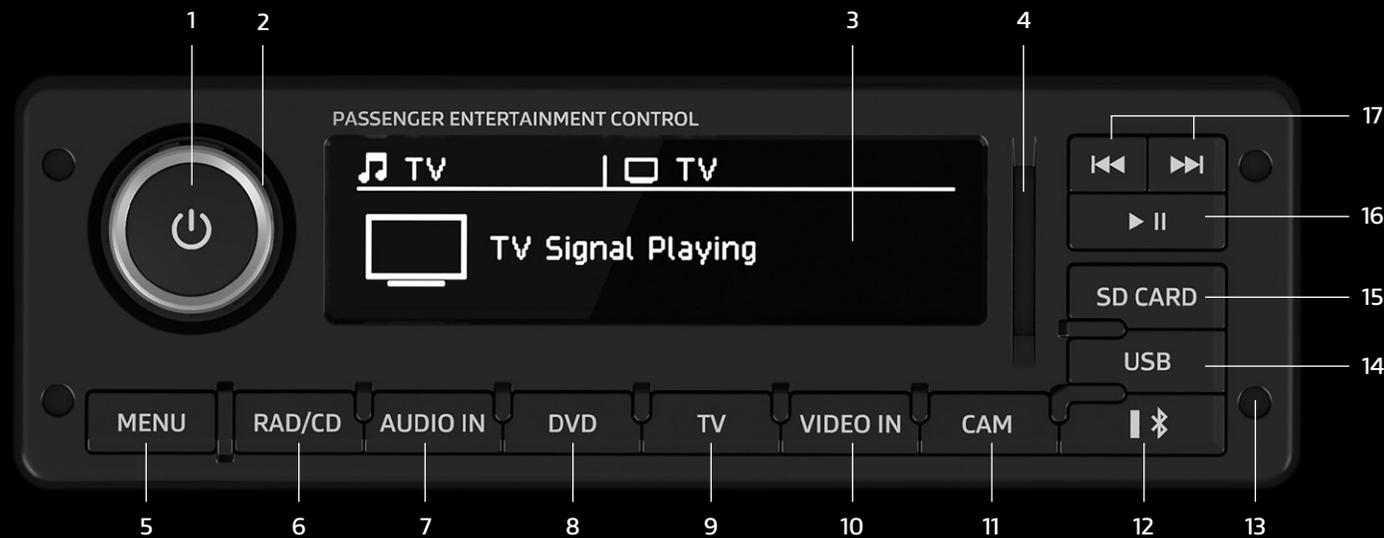

Audio-Video selector for the Passenger's area

- 1 **Power**
Turns on/off the unit.
- 2 **Volume knob**
Increases or decreases the sound output level.
Changes the selected setting.
- 3 **Front display**
Shows information about the operational status of the unit.
- 4 **SD memory card slot**
- 5 **Menu**
 - a. Press MENU to enter menu.
 - b. In menu, rotate VOLUME knob or short press ►►| or |◄◄ to reach the appropriate function.
 - c. Short press POWER button or ►|| to select the function.
 - d. Short press on any program source button will exit menu.
- 6 **Radio**
Selects the dashboard radio as current audio source for the passenger's area.
- 7 **Audio in**
Selects the auxiliary 3.5 mm port as current audio source.
- 8 **DVD**
Selects DVD Player as current audio/video source.
- 9 **TV**
Selects the female HDMI cable connection coming from the back of the parcel rack HDMI switch as current audio/video source (standard on H-Series, optional on X-Series).
- 10 **Video in**
Press VIDEO IN to select an auxiliary video input as current audio/video source.
Press VIDEO IN to select the optional modesty panel HDMI connection as current audio/video source.
- 11 **Cam**
 - a. Press CAM button to select the optional panoramic view camera signal. The video bar of the VSS06 front display will show "CAM". The video monitors turn on automatically.
 - b. Press CAM button again to turn off the panoramic view camera and return to previous audio/video source.
- 12 **Bluetooth**
Selects the connected Bluetooth device audio streaming content as current audio source.
- 13 **Unit removal tool insertion hole (x4)**
- 14 **USB**
Selects the device connected via the USB port as current audio/video source.
- 15 **SD memory card**
Selects the SD card content as current audio/video source.
- 16 **Playback/pause**
- 17 **Skip forward/backward**

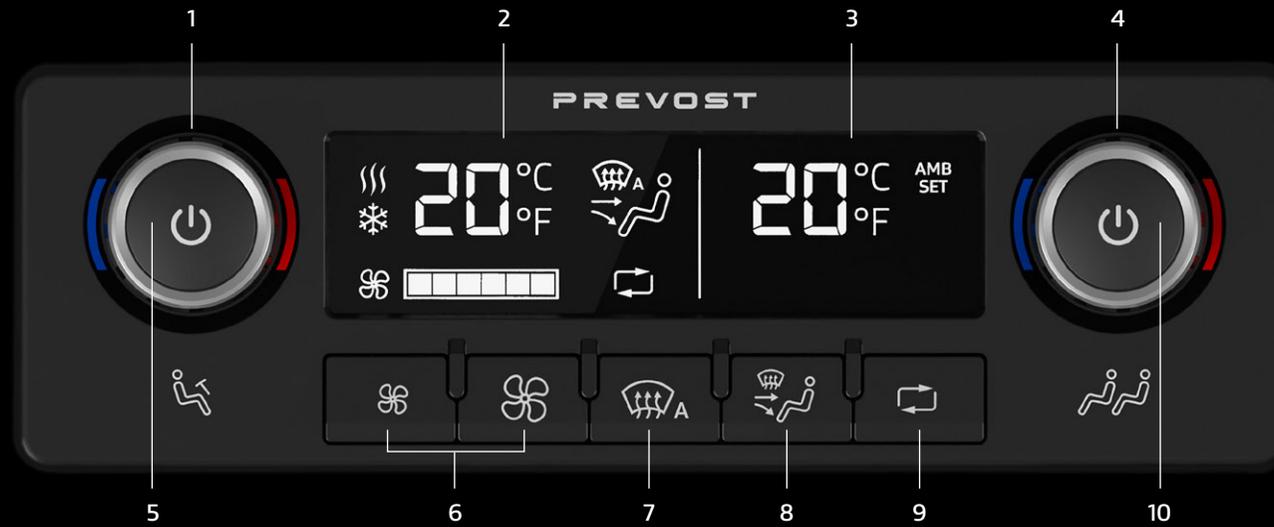

HVAC control unit


- 1 Driver temperature set point adjustment
- 2 Driver section display
- 3 Passenger section display
- 4 Passenger temperature set point adjustment
- 5 Driver HVAC power button
- 6 Fan speed
- 7 Auto-defrost
- 8 Air selection
- 9 Recirculate
- 10 Passenger HVAC power button



Central utility compartment

1 12 Volt power connector

Operating the Wheelchair Lift and Remote

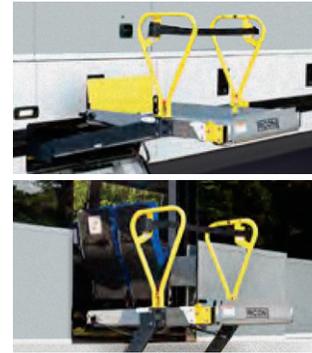

- 1 **Power enable switch** - Provides power to the pendant and enables the lift.
- 2 **Deploy** - Platform moves outward from lift compartment.
- 3 **Stow** - Platform lowers toward ground level. Bridgeplate automatically rises when platform drops below floor level.
- 4 **Down** - Platform lowers toward ground level. Bridgeplate automatically rises when platform drops below floor level.
- 5 **Up** - Platform rises toward vehicle floor level. Bridgeplate automatically lowers when platform arrives at floor level.

Deploy platform

Press and hold Deploy button until platform is completely extended from lift compartment.

Note: Platform cannot be moved up or down unless platform is fully extended.

Lower platform

Press and hold Down button until platform contacts ground.

Verify that bridgeplate is in upright position.

Deploy each handrail by lifting up and outward to a vertical position and then pushing down to lock into place.

Carefully place wheelchair in center of platform, preferably facing outward (away from vehicle), and lock wheelchair brakes.

Pull safety belt from retractor on handrail and fasten to other handrail.

Raise platform

Note: These two steps apply only to F9TF models that stop upward platform movement at an intermediate level.

1- **Partially raise platform** - Press and hold Up button until platform stops at intermediate height.

2- **Open vehicle door** - Fully open vehicle sliding door located above lift. The lift operator or attendant should do this.

For other models

Press and hold Up button until platform stops at floor height and bridgeplate lowers onto vehicle floor.

Release wheelchair brakes, and carefully board passenger into vehicle.

PREVOST
THE ULTIMATE EXPERIENCE

[in](#) | [f](#) | [X](#) | [▶](#) | [@](#) | @PrevostCoach | [|](#) | [prevostcar.com](#)

© 2024 All rights reserved. "Prevost," the Prevost logotype, Prevost model designations and all other Prevost related marks, images and symbols are trademarks, registered trademarks and/or exclusive properties. All other trademarks are property of their respective owners.