

# ENGINE SERVICE PROGRAMS

	LEVEL 1	LEVEL 2	LEVEL 3
<b>ENGINE SERVICE</b>			
Oil Change	■	■	■
Change Oil Filters	■	■	■
Change Fuel Filters	■	■	■
Check Coolant SCA and Freeze Point	■	■	■
Check Coolant Levels	■	■	■
<b>INSPECTION SERVICE</b>			
Inspect Engine Air Filter	■	■	■
Inspect Engine Main Belts	■	■	■
Grease Drive Line U-Joints	■	■	■
Grease Front Axle King Pins	■	■	■
Grease Tie Rod Ends	■	■	■
Grease ISS A-Arm Ball Joints		■	■
Grease Steering Linkage		■	■
Grease Brake Components As Needed		■	■
Grease Tag Axle Lifting Rod		■	■
Inspect Shocks for Leaks		■	■
Change Coolant Filter		■	■
Inspect belt tensioner Air Bags			■
Check Belt Tension Air PSI			■
Tensioner Inspection			■
Drain Air Tanks (Back to Front)			■
Inspect for Oil Leaks			■
Check Hub Oil Levels			■
Check Tire Air PSI			■
<b>FLUID LEVELS</b>			
Check Fan Gear Box Fluid		■	■
Check Power Steering Fluid Level		■	■
Check Differential Fluid level		■	■
Check Transmission Fluid			■

Parts customer service Canada **1-800-463-8876**  
Parts customer service United States **1-800-621-5519**

Service center locations go to [prevostcar.com](https://prevostcar.com)  
to find locations, phone numbers & hours of operation